WALL SCONCE WALL MOUNT LED ARCHITECTURAL LED LUMINAIRE



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

IMPORTANT

- 1. Read all instructions.
- 2. Please Install in accordance with national and local electrical code regulations.
- 3. This product is intended to be installed and serviced by a qualified, licensed electrician.
- 4. No wet locations! dry and damp locations only!
- 5. Turn off electrical power before installing or servicing fixture in any way.
- 6. To reduce the risk of fire and overheating, make sure all connections are tight.
- 7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.

ACCESSORY







PA4X30

Wire Nut Anchor

· ...

Screw

Square Plate




Please isolate two dimming wires by P2 terminal individually if no need dimming;


MUST connect wires with corresponding colors as shown.

/ M

SHOCK HAZARD!


May result in serious injury or death. Turn power OFF at circuit breaker prior to installation or servicing.

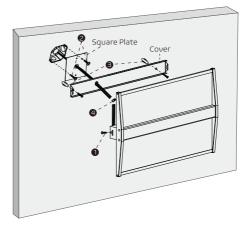



- 1 Take off the cover of driver box by screwdriver.
- Thread the power cord of junction box into the cover of driver box and square plate, fix the cover of square plate into the junction box with screws, then plaster.
- Fix the dirver box cover on the wall with screw.
- Onnect the wires of power cable (provided) with junction box by the wiring caps, then hide all the wires inside the junction box.
- S Fix the luminaire on the cover of driver box with screws as shown.

WIRING

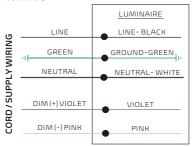

WALL SCONCE SURFACE LED

ARCHITECTURAL LED LUMINAIRE


INSTALLATION INSTRUCTION




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

IMPORTANT

- 1. Read all instructions.
- 2. Please Install in accordance with national and local electrical code regulations.
- 3. This product is intended to be installed and serviced by a qualified, licensed electrician.
- 4. No wet locations! dry and damp locations only!
- 5. Turn off electrical power before installing or servicing fixture in any way.
- To reduce the risk of fire and overheating, make sure all connections are tight.
- 7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.

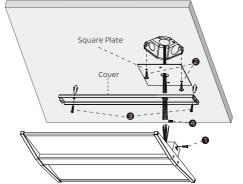



1 Take off the cover of driver box by screwdriver.

- Thread the power cord of junction box into the cover of driver box and square plate, fix the cover of square plate into the junction box with screws, then plaster.
- 3 Fix the dirver box cover on the wall with screw.

Ceiling Type





Hole Diameter: 0.20"

4 Connect the wires of power cable (provided) with junction box by the wiring caps, then hide all the wires inside the junction box.

S Fix the luminaire on the cover of driver box with screws as shown.

ACCESSORY





SCIEW

PA4X30



Screw

Butterfly Drywall

Anchor



Square

Plate



Please isolate two dimming wires by P2 terminal individually if no need dimming;

MUST connect wires with corresponding colors as shown.

∧ Ma

SHOCK HAZARD!

May result in serious injury or death. Turn power OFF at circuit breaker prior to installation or servicing.

WIRING

