
ARCHITECTURAL LED LUMINAIRE

INSTALLATION INSTRUCTION

RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES, DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

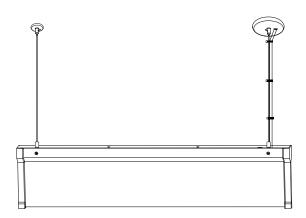


IMPORTANT

- 1. Read all instructions.
- 2. Please Install in accordance with national and local electrical code regulations.
- 3. This product is intended to be installed and serviced by a qualified, licensed electrician.
- 4. No wet locations! dry and damp locations only!
- 5. Turn off electrical power before installing or servicing fixture in any way.
- 6. To reduce the risk of fire and overheating, make sure all connections are tight.
- 7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.

Wattage & CCT Adjustable By Dip Switch

| Length | High | Medium | Low |
|--------|--------|--------|--------|
| 3' | 4000lm | 3000lm | 2000lm |
| 4' | 4000lm | 3000lm | 2000lm |

WIRING

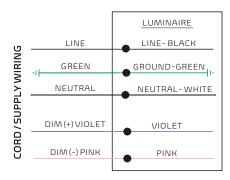




Please isolate two dimming wires by P2 terminal individually if no need dimming; MUST connect wires with corresponding colors as shown.



SHOCK HAZARD!

May result in serious injury or death. Turn power OFF at circuit breaker prior to installation or servicing.

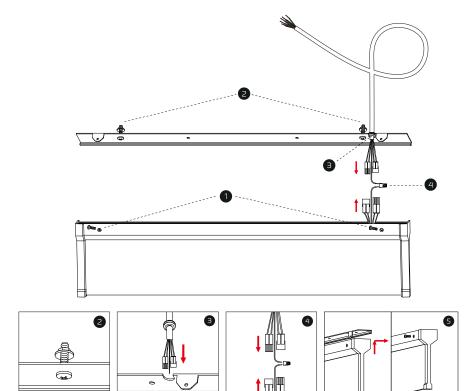


PLEASE FOLLOW THESE STEPS

- 1 Take off the cover by screwdriver. (Please noted that there are screws&screwnuts inside the luminaire).
- Assemble the screws&screwnuts as shown.
- 8 Insert the power cord into the opening of cover as shown.
- Connect wires by quick connectors and wiring caps.
- Reattach the cover by using provided into the led luminaire.
- 6 Suspend the led luminaire in the ceiling (different ceiling type use corresponding accessory).

Screw &

Screwnut

Mounting Point

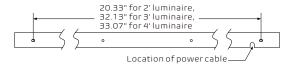


VERTICAL PENDANT LED


ARCHITECTURAL LED LUMINAIRE

RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

> POWER FEED

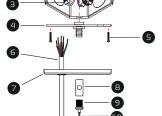

NON POWER SUSPENSION

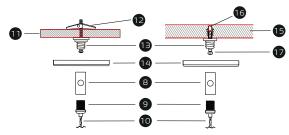

PARTS LIST

| 4" Octogon Junction Box (By Other |
|-----------------------------------|
|-----------------------------------|

- Power Cord (By Others) 2
- 8 Wire Nut
- 4 Junction Box Crossbar
- Screw PM4*22
- 6 Power Cord
- 7 4" Power Canopy Kit
- 8 Cable Holder
- 9 Strain Relief Thread Nut
- Aircraft Cable
- Drywall Ceiling (By Others)
- Butterfly Drywall Anchor
- Œ Crimp Stud
- 14 2" Canopy
- (By Others)
- 16 Anchor
- Screw PA4*30

Canopy











Butterfly Drywall Anchor

Power Cord







Suspension Kit





Strain Relief Thread Nut





Crimp Stud



Anchor



VERTICAL PENDANT LED





ARCHITECTURAL LED LUMINAIRE **DROP CEILING**

RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

> POWER FEED

> PARTS LIST

4 Wire Nut

6 Screw 6#*4

10 Power Cord

Cable Holder B Strain Relief Thread Nut Aircraft Cable 1 2" Canopy

7 T-grid (By Others)

8 Plastic Grommet 9 Ceiling Tile (By Others)

1 4" Canopy Power Feed


2 Power Cord (By Others)

S Assembled T-grid Clips

4" Octogon Junction Box

1 Armored Cable & Connector (By Others)

NON POWER SUSPENSION

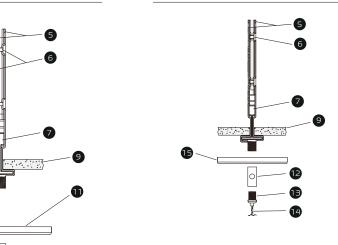













Power Cord











Suspension Kit





